

### Description

PA Pressure Relief Flap (Model: PRF) is designed to maintain the duct pressure of the pressurized room and standard constructed from galvanised steel (GI).



### Installation Guideline

#### 1. Opening Clearance

The hole opening on the wall shall be larger than PRF's neck to permit the installation of the system and the gap should be within 5mm of the overall size of the PRF's neck.

#### 2. Installation Detail

##### A. Countersunk Screw Mounting

After insert the PRF into the opening hole, direct secure the PRF to the wall with the use of an M5 self-tapping screw on the frame of the PRF tighten it until the surface of the PRF is flush with the wall.

